



SYMMONS® Ultra-Sense™

Lavatory Faucet S-6095, S-6098

Battery Powered, Sensor-Activated


Installation, Operation & Service Instructions



Model Numbers

- S-6095 Faucet, 5¼" spout, faucet p/n SF-01365
- S-6098 Faucet, 8" spout, faucet p/n SF-01366
- S-6095-G Faucet, 5¼" spout with grid strainer drain assembly, faucet p/n SF-01365
- S-6098-G Faucet, 8" spout, with grid strainer drain assembly, faucet p/n SF-01366

Tools & Materials

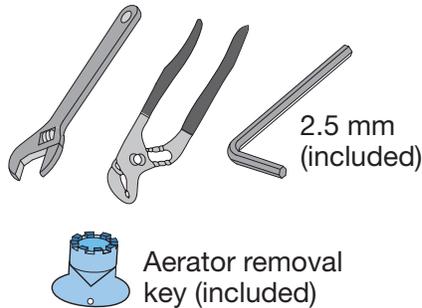

Need Help?

Symmons customer service:
 (800) 796-6667, (781) 848-2250
 Email: customerservice@symmons.com
 Monday - Friday 7:30 am - 7:00 pm EST

www.symmons.com/service

- Technical help
- Product information
- Warranty policy




Quick Install Guide Ultra-Sense Lavatory Faucet, S-6095, S-6098

Model S-6095, p/n SF-01365 - 5¼" spout ▪ Model S-6098, p/n SF-01366 - 8" spout


Single hole mount

Step 1
Attach faucet to deck

Step 2
Connect water supply line

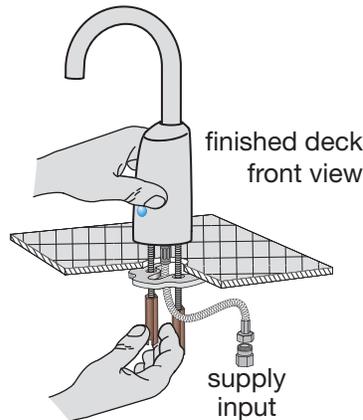


Operation

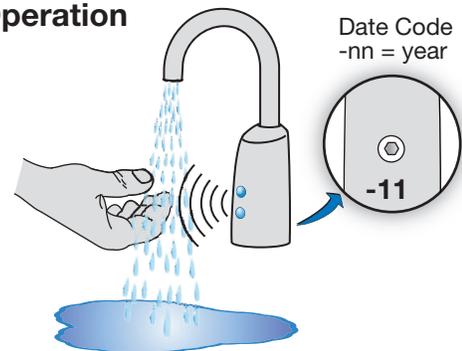


Three hole mount with deck plate

Step 1
Attach faucet and deck plate to deck

Step 2
Connect water supply line

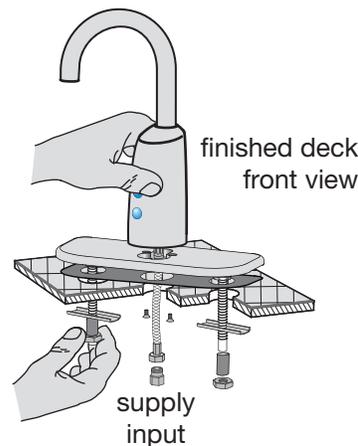


Spout swivel modifications

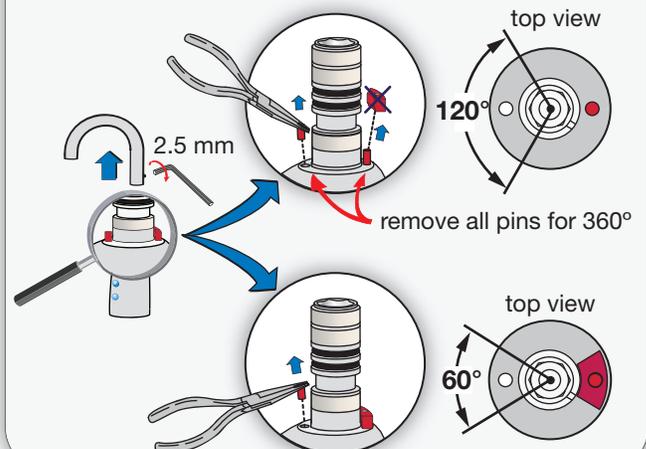


Installation Instructions

Important! Prior to connecting the water supply, ensure supply lines are flushed. Particles can clog filter and result in malfunction. Excessive particles from supply lines may require installing a separate efficient filter.


Step 1 Attach faucet to deck (1 hole) Single hole mount without deck plate

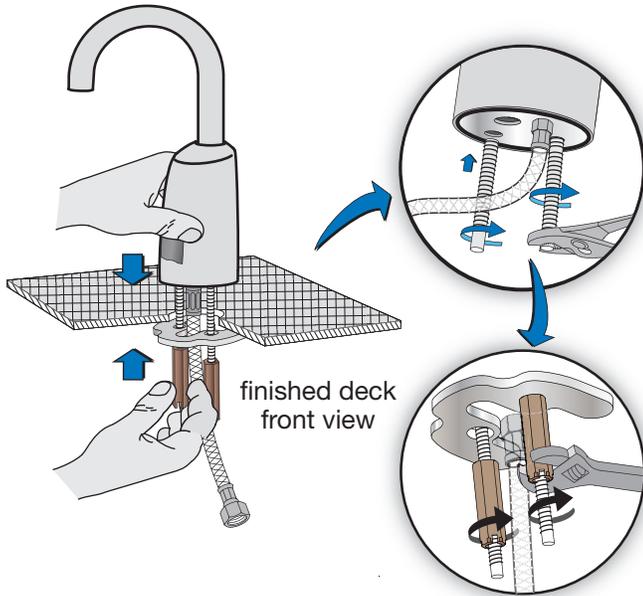


Step 1 Attach faucet to deck (3 hole) Three hole mount with deck plate

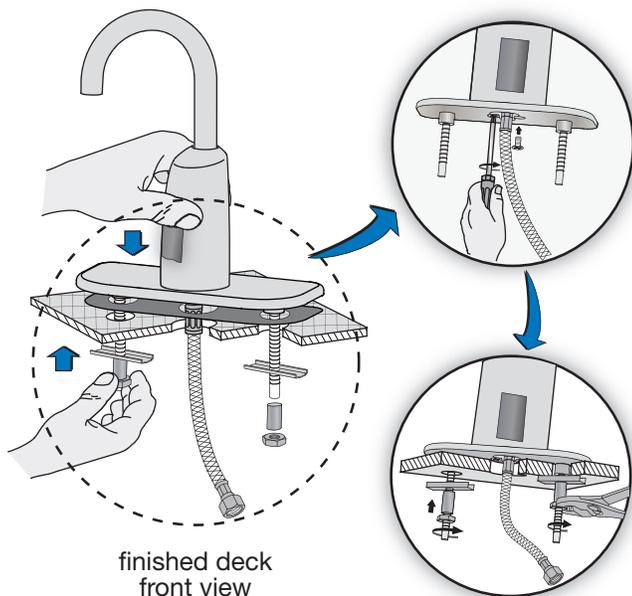

Step 2 Connect water supply line

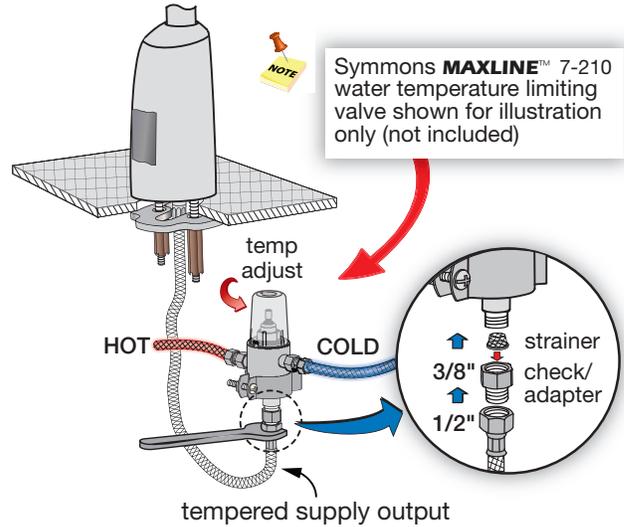

Step 3 Test operation and check for leaks

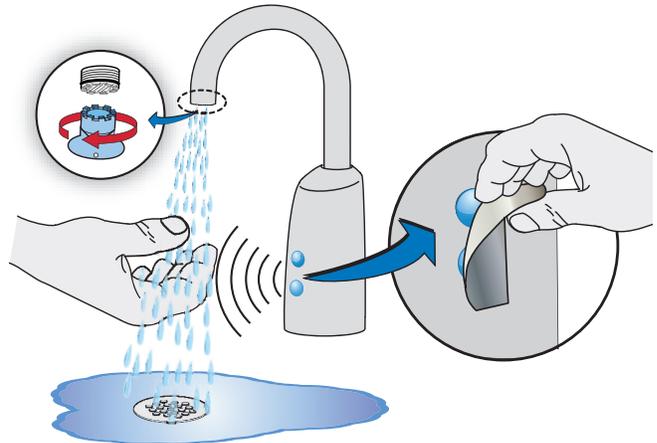

Operation

Sensor range: typically 1/2 to 10 inches

Place hand under faucet, water will flow automatically for 10 seconds and shut off.

Auto shut-off: 1/2 to 1 second

Remove hands, water will stop automatically within 1/2 to 1 second.

Security OFF: 10 seconds

Faucet will automatically shut off after continuous water flow for 10 seconds.


Weak or dead battery

LED will flash to signal battery is getting weak and should be replaced soon.




Service Instructions


Replace Battery

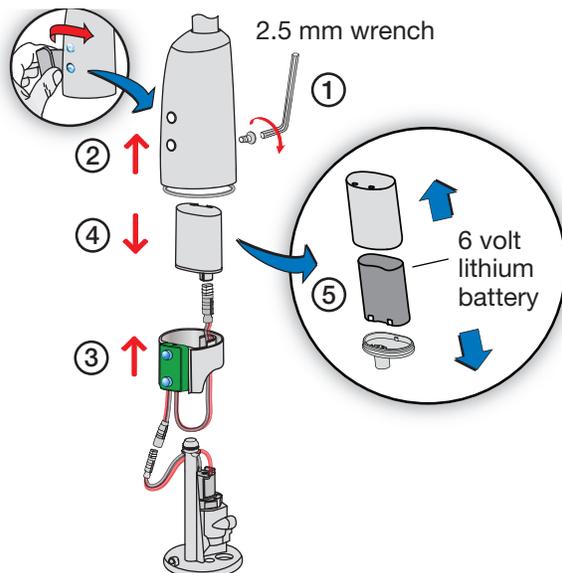

Replace Solenoid Valve

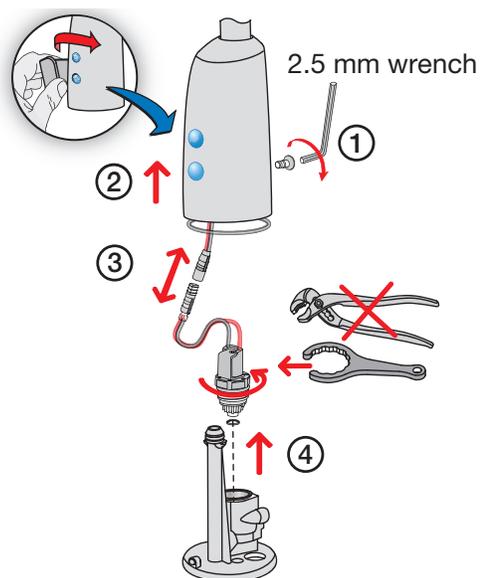


Cleaning water supply strainer

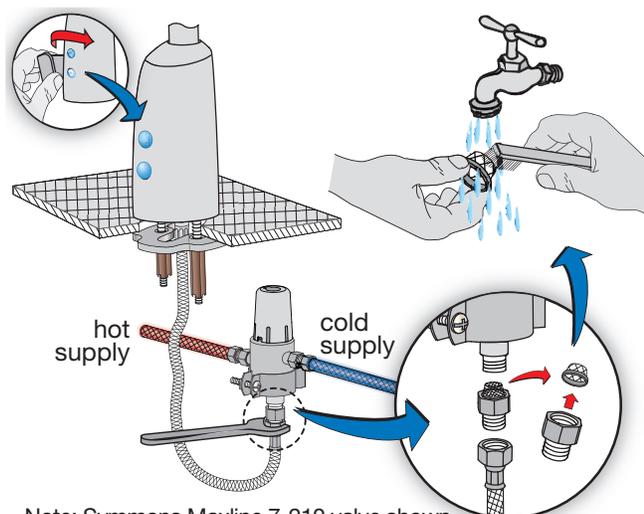

Note: Symmons Maxline 7-210 valve shown for illustration only and not required

Replace Sensor

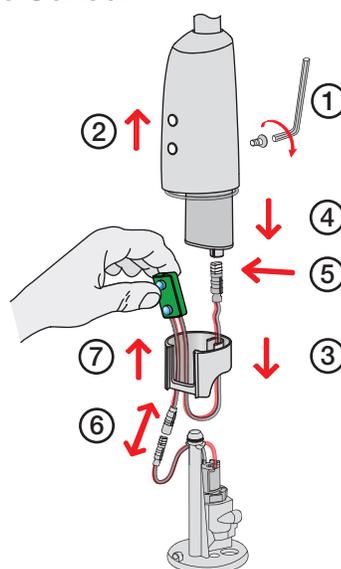

Troubleshooting

No water flow

- No battery installed, battery connection is loose or battery power is low.
- Filter in strainer is clogged. Excessive clogged filter may require installing of separate efficient filter into supply line.
- Solenoid valve connector inside faucet is loose.
- Circuit board is faulty. Do not attempt repair, please contact Symmons customer service.
- Solenoid valve is faulty. Do not attempt repair, please contact Symmons customer service.

Faucet care

Cleaning surface finish

- Block sensor with sensor cuff to prevent faucet from turning on while cleaning.
- Clean finish area by using mild soap and water or non-abrasive cleaner and then rinse immediately. A non-abrasive wax may be used to preserve finish area.



Precautions


- Ensure sensor is not damaged through impact or scratches.
- Ensure sensor is not blocked or disturbed by any objects
- Ensure a strong light source is not aimed directly at sensor or through a mirror.

Dimensions Ultra-Sense Lavatory Faucet, S-6095, S-6098

S-6095, p/n SF-01365.....5¼" Spout
 S-6098, p/n SF-01366.....8" Spout

Model series	Spout size	Dimension	
		A	B
S-6095	5-1/4"	5-1/4" (133 mm)	11-3/4" (299 mm)
S-6098	8"	8.0" (203 mm)	12-11/16" (322 mm)


Deck thickness
 1-3/16" (30 mm) max

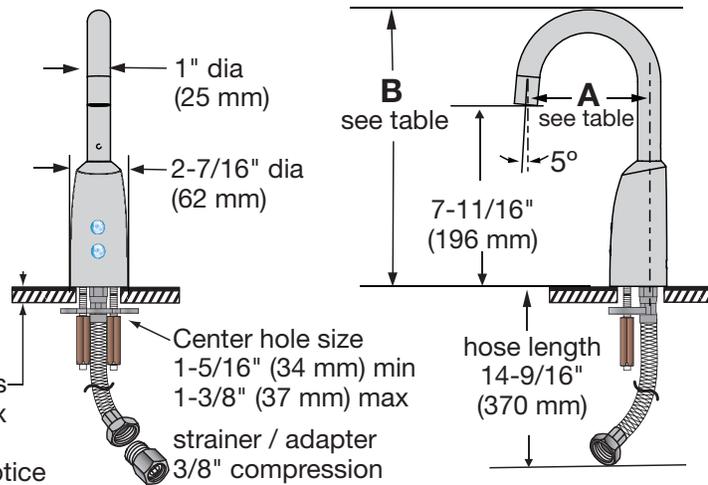

Note: Dimensions subject to change without notice

Parts Assembly Ultra-Sense Lavatory Faucet, S-6095, S-6098

S-6095, p/n SF-01365.....5¼" Spout
 S-6098, p/n SF-01366.....8" Spout

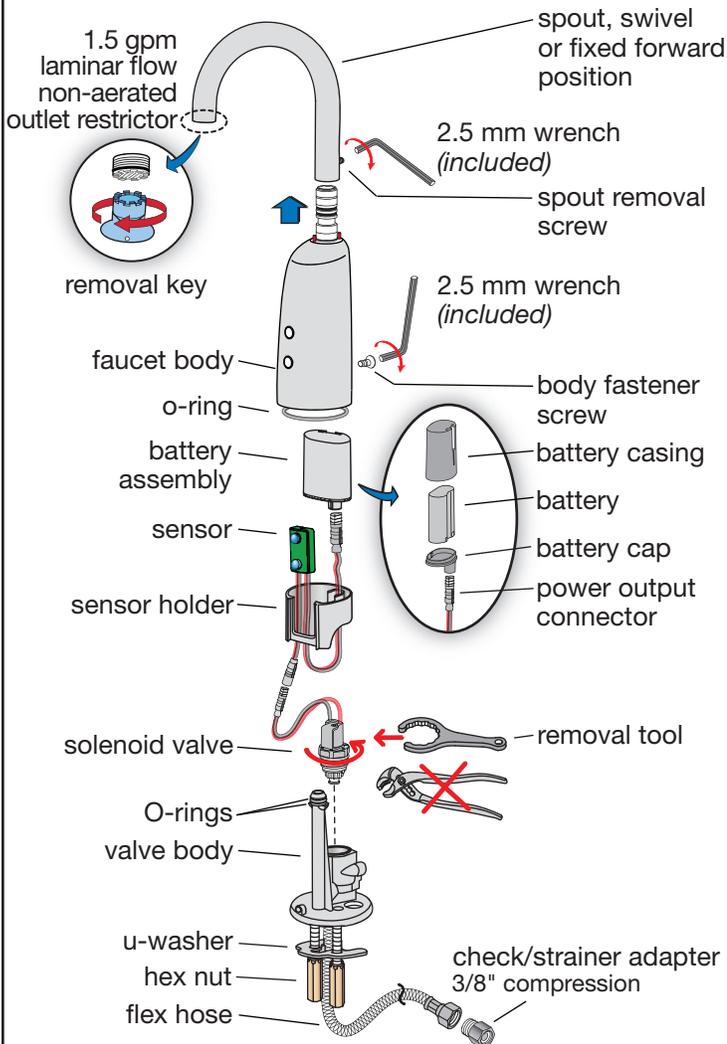

S-6095 / S-6098 Replacement Parts	
Part Number	Item
SF-241	Battery casing
SF-2CR5	6v lithium battery, 2CR5 with removal paddle used on some model faucets
SF-240	Solenoid valve with removal tool
SF-161	O-ring kit
SF-01530	Sensor
SF-01532	Sensor holder
SSF-108	Check / strainer kit for flex hose connections <i>housing check screen</i>
SF-01657	Single hole mounting kit
SF-01535	Spout rotation limit pins and 60° limiter
FLR-130-1.5-KIT	Aerator, vandal resistant, with removal key #FLR-130-KEY ■ 1.5 gpm (5.7 L/min)
RO-003 FLR-01526 FLR-01524	Non-aerated laminar outlet restrictor, vandal resistant, with removal key #FLR-130-KEY ■ 0.35 gpm (1.3 L/min) laminar spray ■ 0.5 gpm (1.9 L/min) laminar spray ■ 1.5 gpm (5.7 L/min) laminar flow

Ordering replacement parts:

Call Symmons customer service at (800) 796-6667, (781) 848-2250 M-F 7:30 am - 7:00 pm EST or check our website at www.symmons.com for a list of Symmons distributors.

Model# S-6095, Part# SF-01365 ■ Model# S-6098, Part# SF-01366

Symmons Industries, Inc. ■ 31 Brooks Drive ■ Braintree, MA 02184 ■ Phone: (800) 796-6667 ■ Fax: (800) 961-9621
 Copyright © 2016 Symmons Industries, Inc. ■ symmons.com ■ gethelp@symmons.com ■ ZV-1031 REV B ■ 111716