


FS 1 Mode Hand Shower Unit



Dimensions

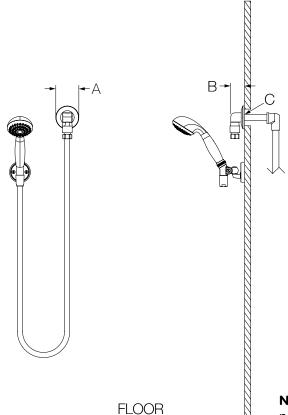


Measurements			
Α	Ø 2-1/2", 64 mm		
В	1-1/2", 38 mm		
С	Male 1/2" IPS fitting must protrude 3/8" (10 mm)		
	from finished wall		

Note: Dimensions subject to change without notice.

ty for complete warranty information.

Parts Breakdown

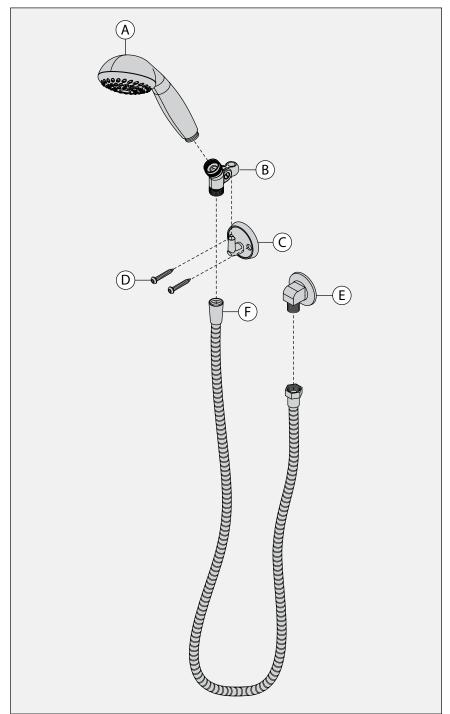

Replacement Parts				
Item	Description	Part Number		
Α	Wand (chrome)	FP-1		
	Wand (STN)	EF-100-STN		
В	Swivel	FP-1E-BRASS		
С	Cradle			
	Mounting	FP-2		
	Screws			
E	Wall Elbow	FP-40		
F	60" Hose	RTS-045		

Note: Apply finish code to part number for premium finish (wand becomes EF-100-STN).

Tools Required for Installation		
Adjustable Wrench		
Drill		
Phillips Head Screwdriver		
Plumber Tape		
Silicone		

Notes:

- 1) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall.
- 2) Apply plumber tape to all threaded connections.

WARNING: This product can expose you to chemicals including lead, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www. P65Warnings.ca.gov.