



Wall Mounted Grab Bar SGB-BBZ


Installation Instructions



Model Numbers

SGB-12-BBZ	12 inch ADA Grab Bar
SGB-18-BBZ	18 inch ADA Grab Bar
SGB-24-BBZ	24 inch ADA Grab Bar
SGB-30-BBZ	30 inch ADA Grab Bar
SGB-36-BBZ	36 inch ADA Grab Bar
SGB-42-BBZ	42 inch ADA Grab Bar
SGB-48-BBZ	48 inch ADA Grab Bar

Tools and Materials

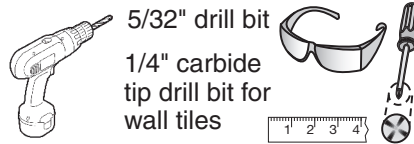

Compliance

2010 ADA Standards for Accessible Design
 Grab bar assembly complies with the applicable requirements.


Need Help?

Symmons customer service:
 (800) 796-6667, (781) 848-2250
 gethelp@symmons.com
 Mon - Fri 7:30 am - 7:00 pm EST
www.symmons.com/service

- Technical help
- Product information
- Warranty policy



Visual Guide Wall Mounted Grab Bar SGB-BBZ

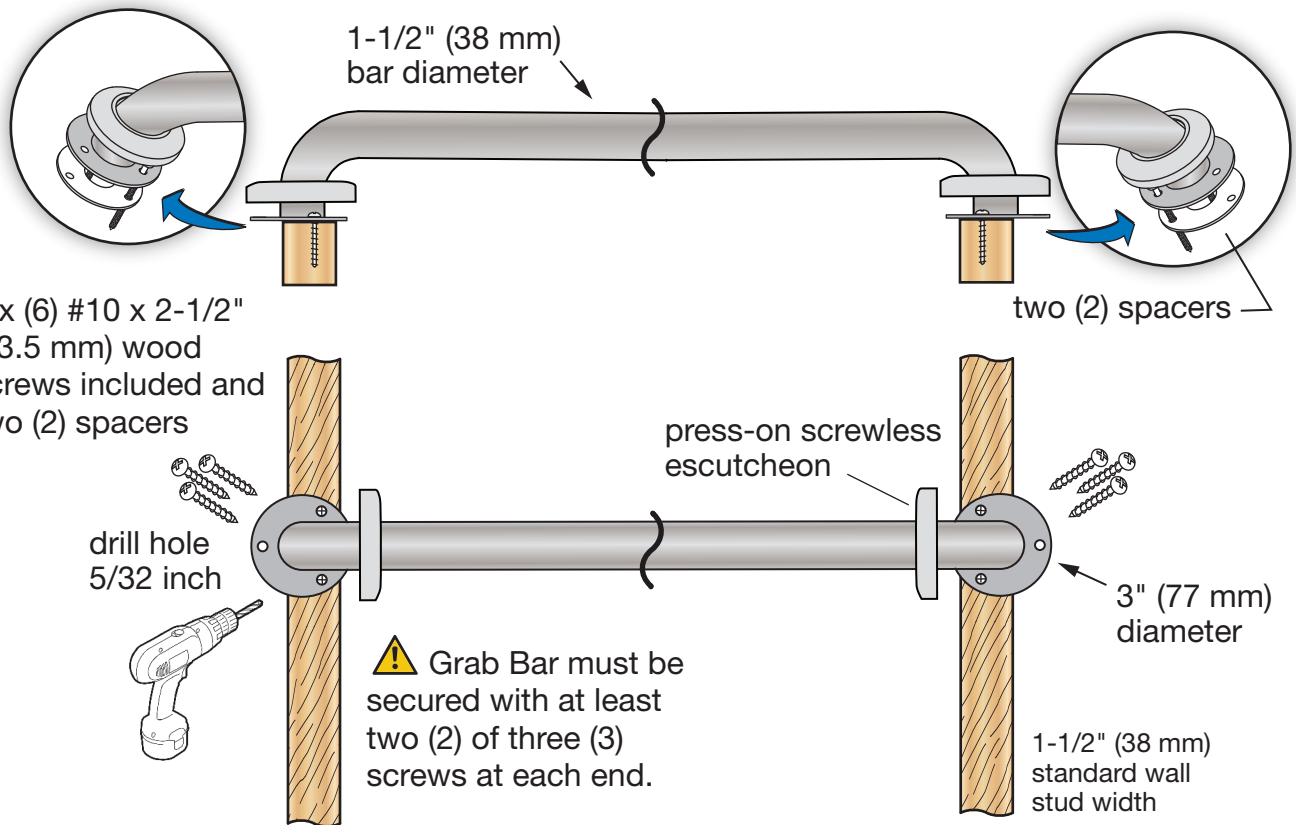

Installation Notes

Grab Bar Location

For proper mounting heights and location consult with your state and local code official having jurisdiction over the installation.

Solid Support

- Grab Bar must be mounted with both ends positioned over a wall stud. A stud finder can be used to locate wall studs.
- Secure through wall board or tile to the wall stud so as to hold a minimum of 250 pounds of force.
- At least two (2) of the three (3) screws provided must be used on each end of the Grab Bar to properly secure.

Note: Standard size wall stud limits using more than two (2) screws.

Mounting Grab Bar

- Drill all holes through wall board into wood wall studs using a power drill and a 5/32 inch drill bit.
 - Ceramic tiles - If installing Grab Bar over ceramic tiles, first drill a pilot hole through the tile using a 1/4 inch carbide tip drill bit to prevent damage to the tiles.
- Next, drill a pilot hole into the wood wall stud using the 5/32 inch drill bit.

Care and Cleaning

Mild soap and water or a non-abrasive cleaner is recommended for cleaning.

Note:

Repair parts for Grab Bar are not available. To replace Grab Bar, please order applicable model number.

Dimensions Wall Mounted Grab Bar, SGB-BBZ

Grab Bar Length	
Model	Length
SGB-12	12" (305 mm)
SGB-18	18" (457 mm)
SGB-24	24" (610 mm)
SGB-30	30" (762 mm)
SGB-36	36" (914 mm)
SGB-42	42" (1067 mm)
SGB-48	48" (1219 mm)

