


SK-7200-PO Single Handle Pull-Out Kitchen Faucet Installation Guide



Model Numbers	Specification		
Single Handle Pull-Out Kitchen Faucet	Single Handle Pull-Out Kitchen Faucet shall include single hole mount configuration, ceramic cartridge, 3/8" compression connections and standard 2.2 gpm		
Options/Modifications	(8.3 L/min) aerator. Faucet shall be made from metal construction, plated in standard polished chrome finish.		
☐ -1.0 CG 1.0 gpm (3.8 L/min) aerator	construction, plated in standard policined cinemon		
Note: Append appropriate -suffix to model number.			
Warranty	Compliance		
Limited Lifetime - to the original end purchaser in consumer/residential installations. 5 Years - for industrial/commercial installations. Refer to www.symmons.com/warranty for complete warranty information.	-ASME A112.18.1/CSA B125.1 -NSF/ANSI 61.9		


Dimensions

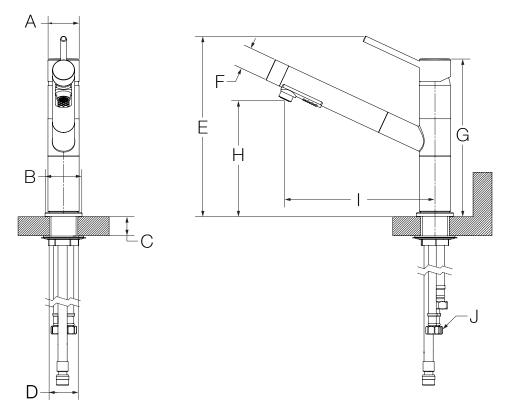

Measurements				
Α	Ø 1-5/8", 41 mm			
В	Ø 2", 51 mm			
С	Deck Thickness Ref.			
	Max. 1-1/2", 38 mm			
D	Hole Size			
	Ø 1-1/2", 38 mm			
Ε	9-5/8", 244 mm			
F	Ø 1-1/8", 29 mm			
G	8-3/8", 213 mm			
Н	6-1/4", 159 mm			
Ι	8", 203 mm			
J	3/8" compression fitting			

Note: Dimensions subject to change without notice.

Parts Breakdown

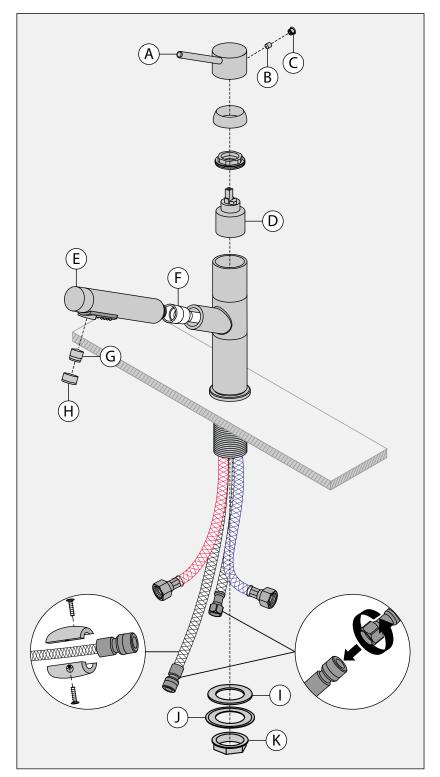

Replacement Parts				
Item	Description		Part Number	
Α	Handle			
В	Set Screw		RK-041	
С	Plug Button			
D	Cartridge		KN-4	
E	Spray Wand		RK-044	
F	Pull-Out Hose		RK-032-GY	
G H	Aerator Housing		RK-045-1.5	
J K	Rubber Washer Metal Washer Mounting Nut		RK-043	
Tools Required for Installation				
Adjustable Wrench				
Allen Wrench: Handle (2 mm)				
Plu	ımber Tape			
	Silicone	(

Installation Notes:

- 1) Apply a bead of silicone around the perimeter of all faucet trim installed to deck surface.
- 2) Apply plumber tape to threaded connections as necessary. DO NOT use plumber tape on fittings with face seal washers or o-rings.
- 3) DO NOT OVERTIGHTEN fittings with face seal washers or o-rings.

MARNING: This product can expose you to chemicals including lead, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.